

Installation Instructions – GolfNet Support SunnyCal Solar Golf Net Support Kit

Kit

includes: (A) 90 degree triangle supports



(B) Tile hooks



or

(B) Fastjack Flashing



(C) 18" chain tensioner




(D) Carabiner




1. Define the placement of the 90-degree anchor supports to be on 6-7 ft intervals around the peripheral edges of the net. Keep in mind to prevent anchor supports from creating shade on the array.

2. Based upon where the placements of the anchor supports, install either tile hooks or your Fastjack supports. Place the tile hooks so that the top of the hole on the tile hook or flashing lines up with the slots.

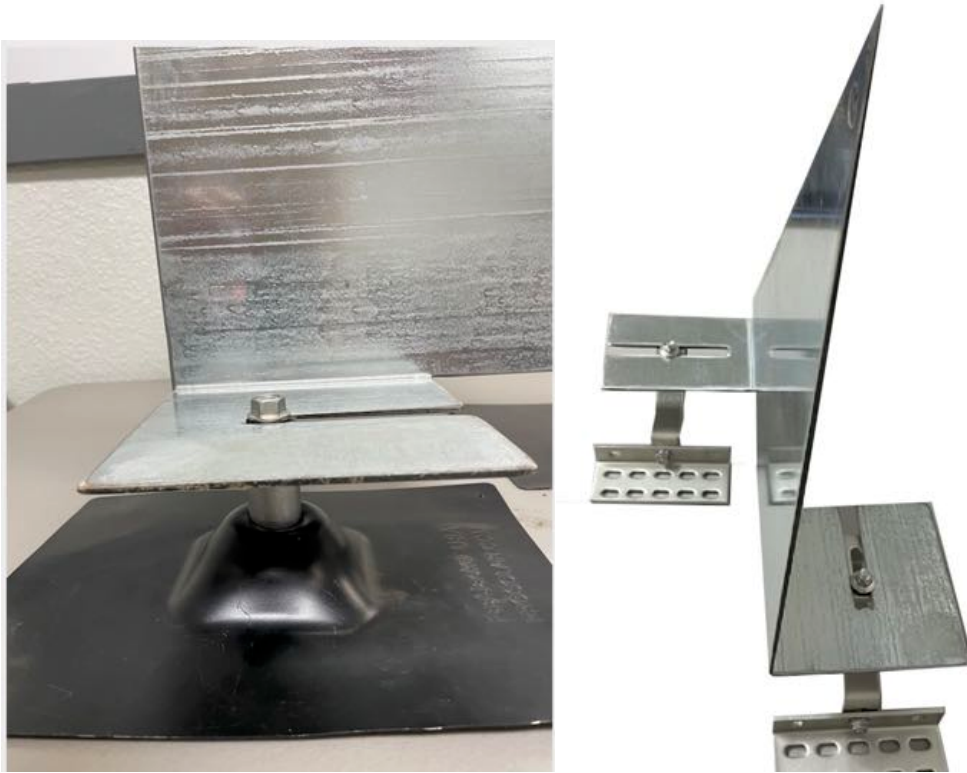

3. Install either the tile hook or Fastjack flashing (these will be used as a base on which to mount the 90 degree anchor support)
 - a. For the tile hook: the base of the tile hook has 10 holes through which a lag bolt can be used – pick the 2 holes that will provide the best support and alignment for the tile hook to the tile.
 - b. For the Fastjack flashing: secure the base of the Fastjack using the lag bolt. Then screw in the top of the Fastjack and put the flashing on top of the Fastjack (through the hole). The top half of the flashing will slip under the shingle
4. Attach the 90-degree support to either the tile hook or the Fastjack flashing using the provided nut/bolt/washer/split-washer.

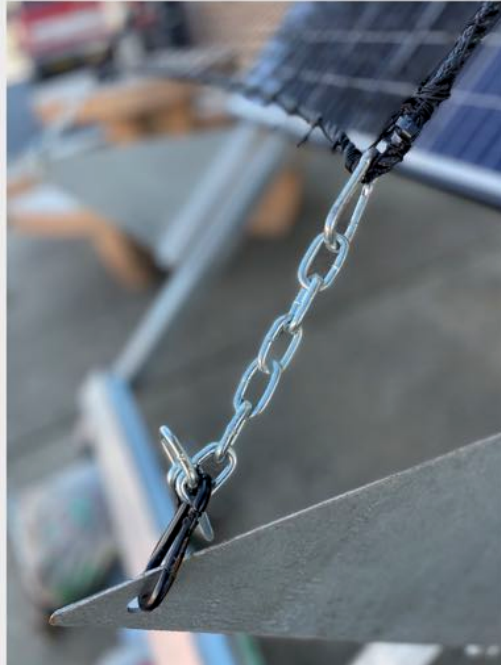

5. Install a single carabineer (D) on the triangle supports going halfway around the net and attach the net to the supports. The other half of the net will use a chain tensioner (C) (2 carabineers and an 18" chain) to secure the net to the supports. When installing the chain tensioners, pull the net tight and clip the carabineer into the chain link that will keep the net the tight.

